




Ceratti ¹⁹⁵⁴ SPA







Vito110/B

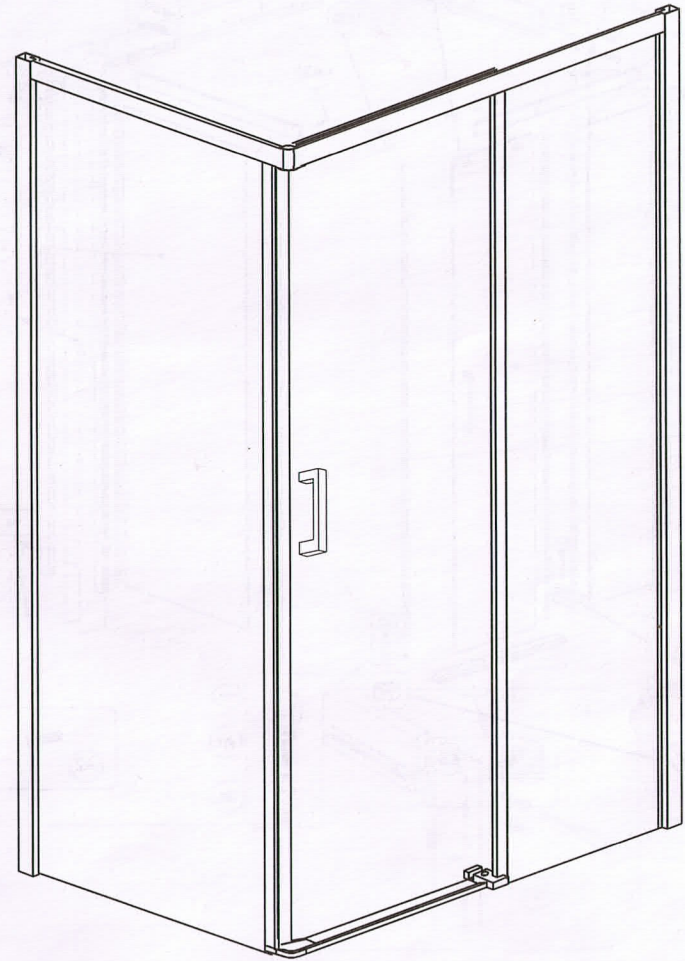



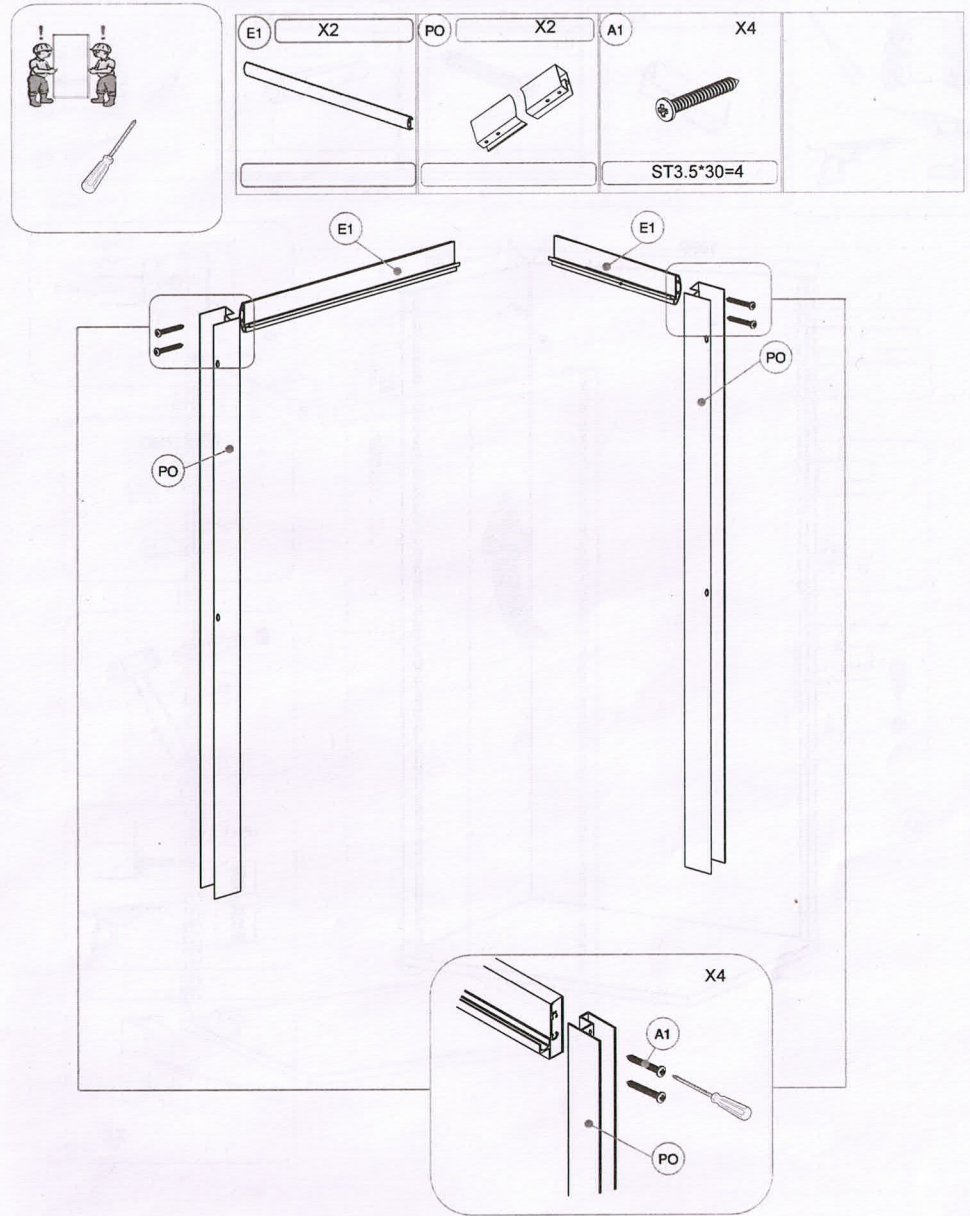


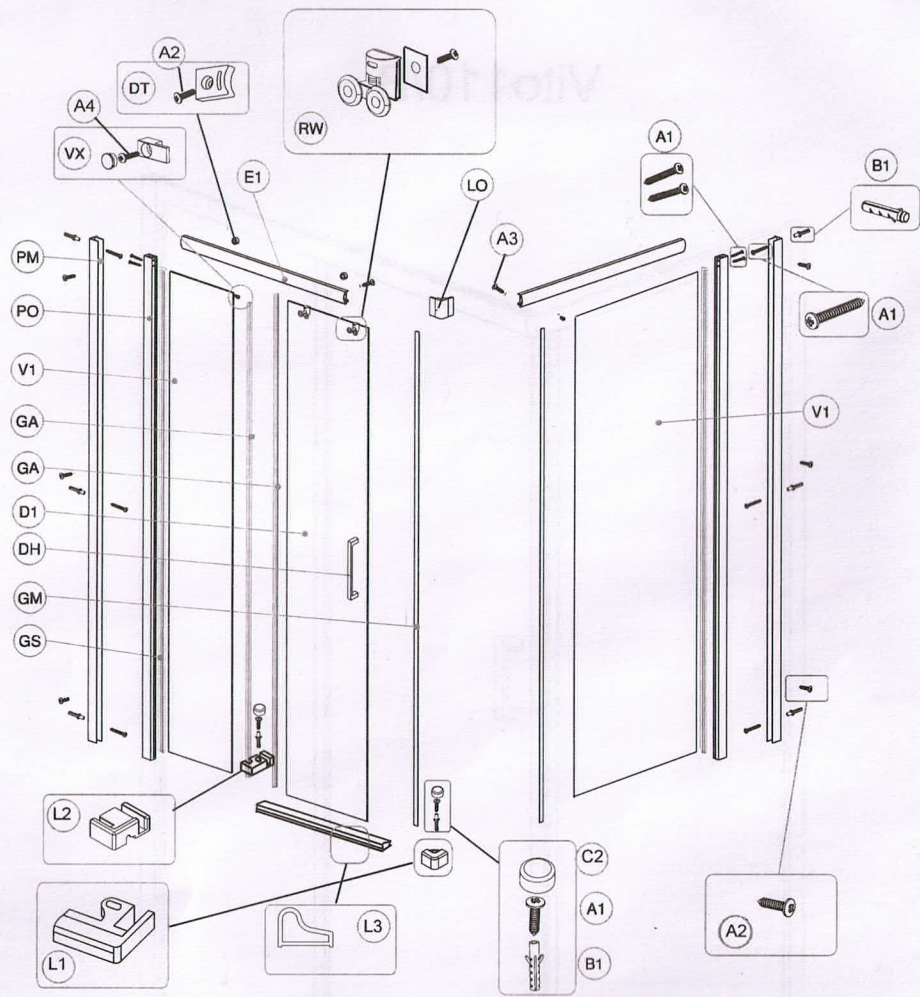


PM	X2	A1	ST4*30=6	B1	Ø6 X6

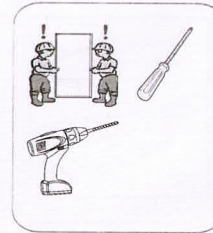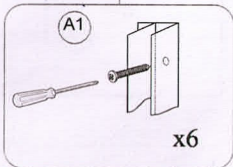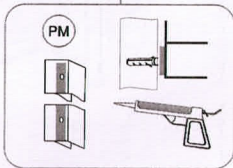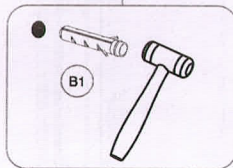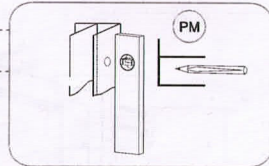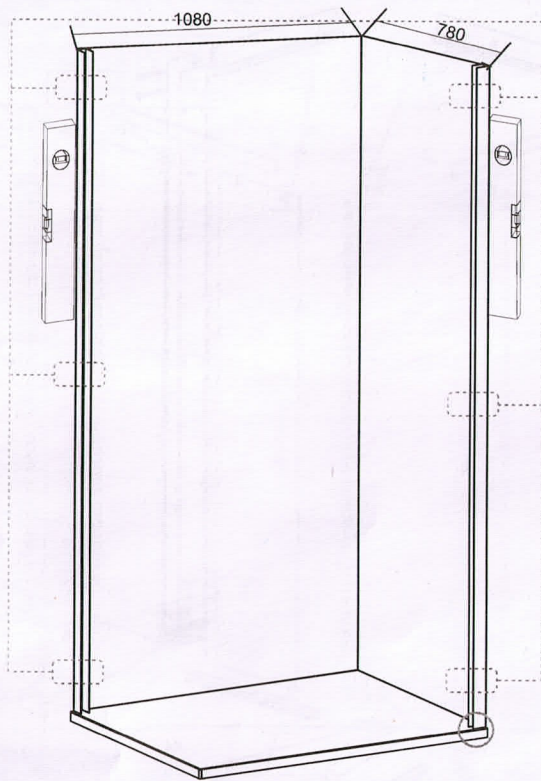

A2	X6	Ø 2.5	
* ST4X10			

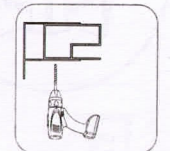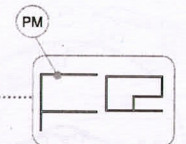
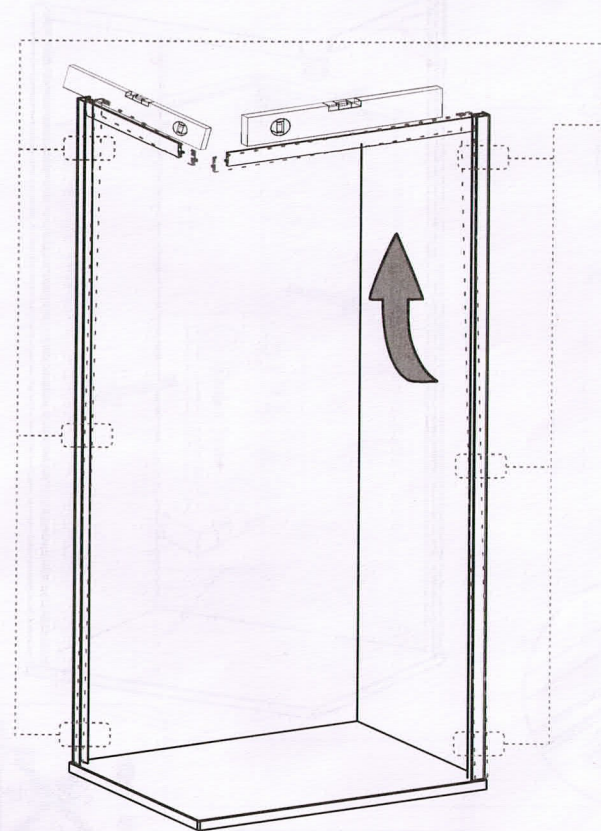


A2

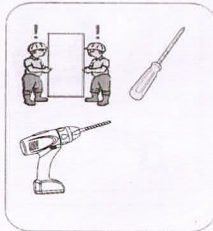


LO	X1
* A3 ST4X8	





$\varnothing 2,5$

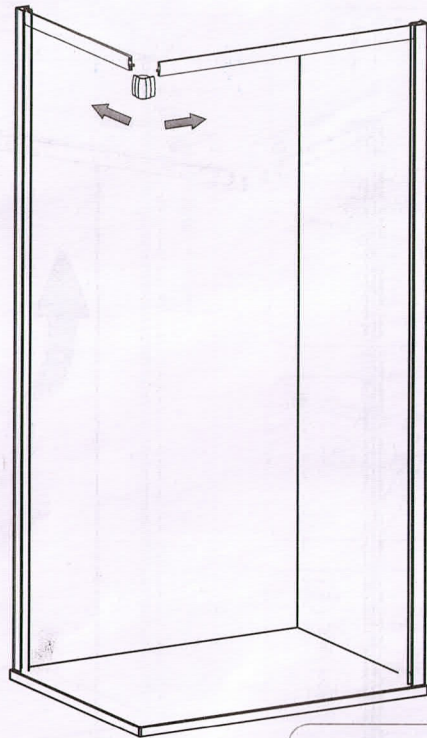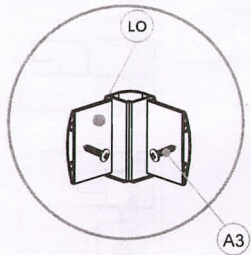

1cm

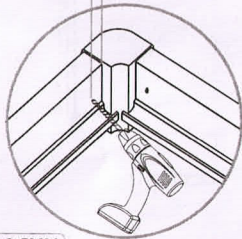






2.5MM

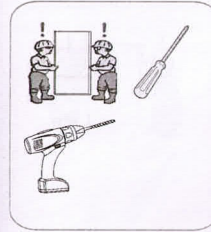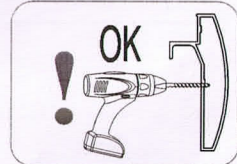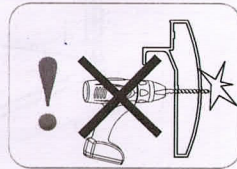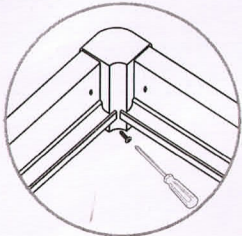


V1	X2







VX	X2
* ST4X14	

$\varnothing 2,5$

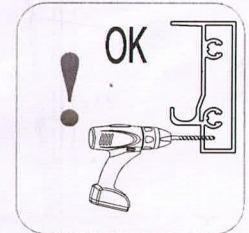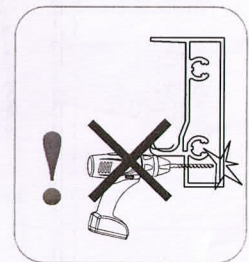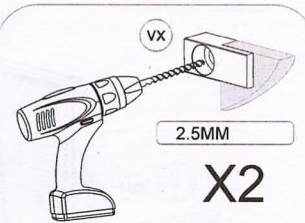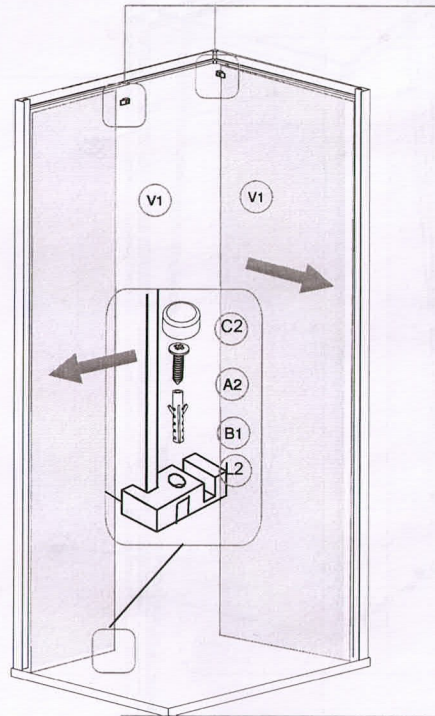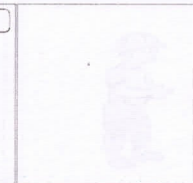


ST4X14
X2

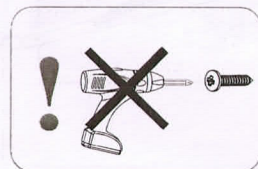

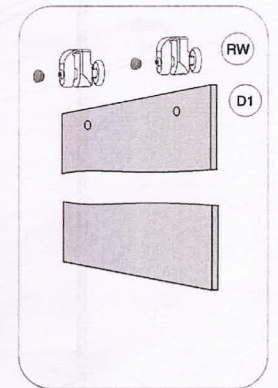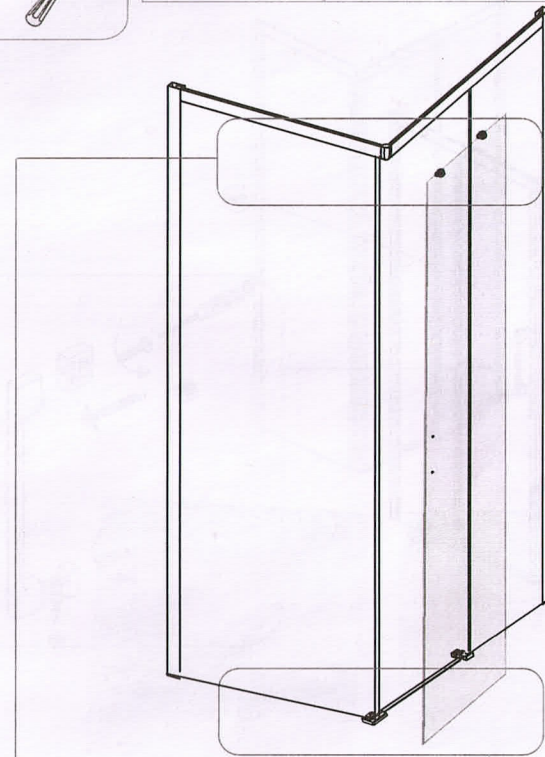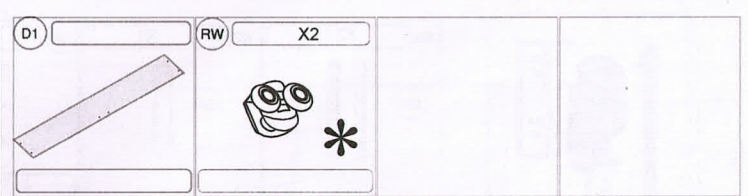
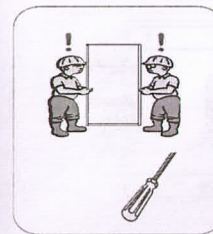
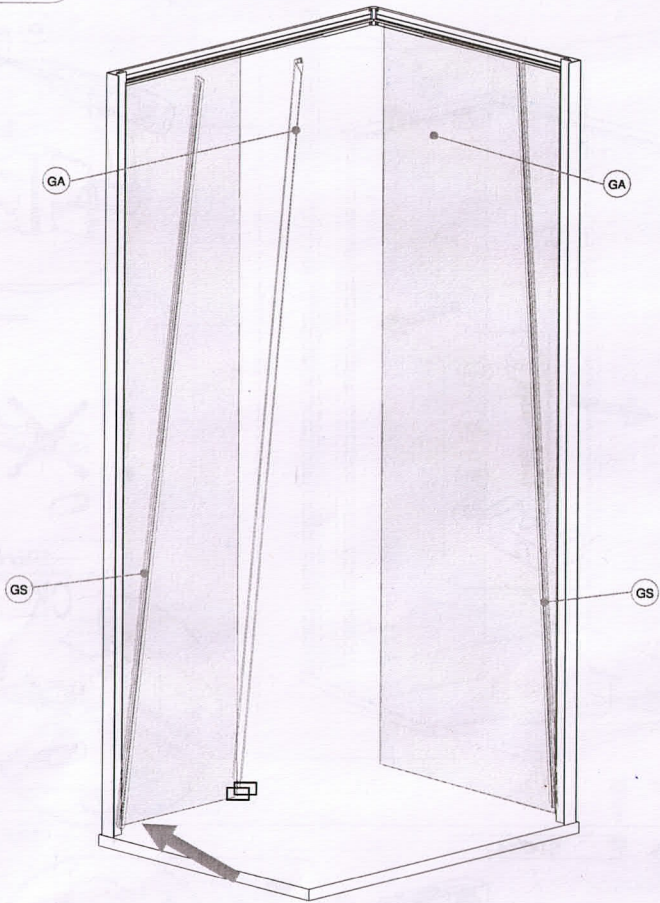
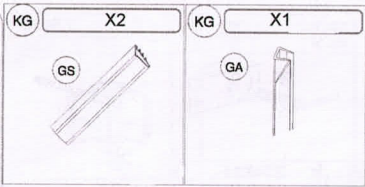



A19

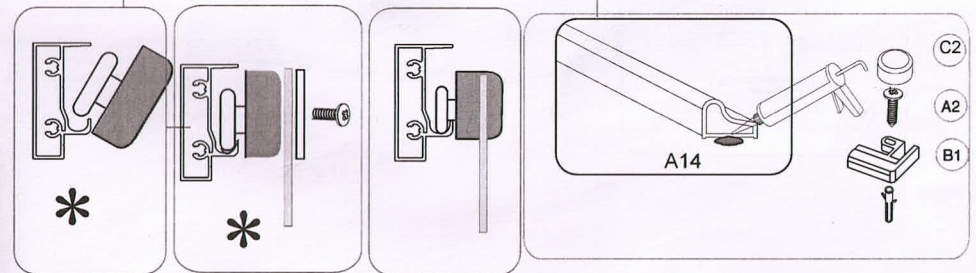






KG	X2	KG	X1	DH	X 1
GM		GA			L20

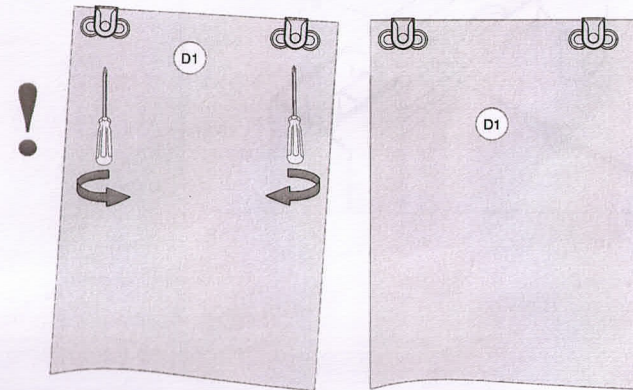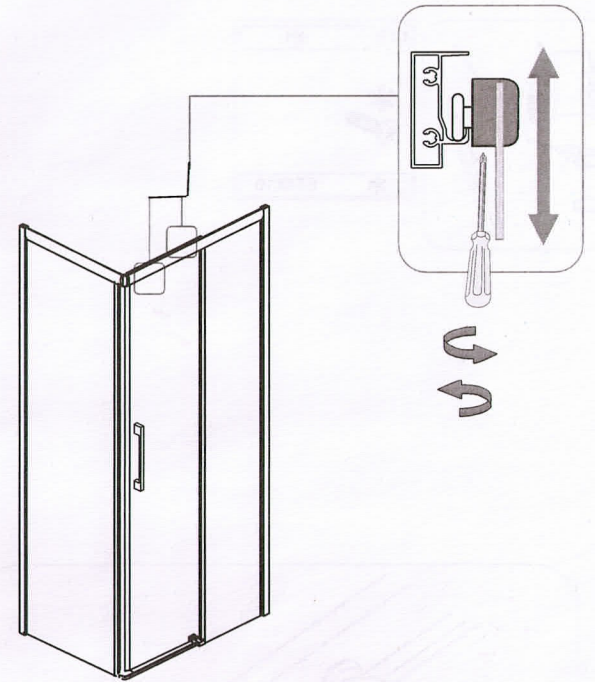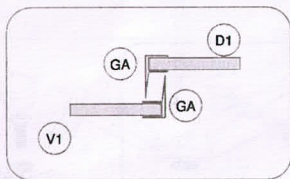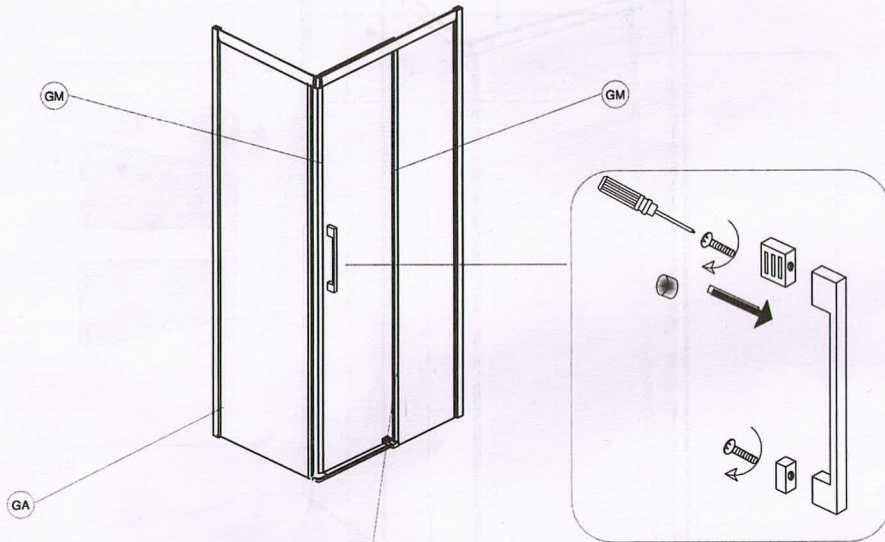

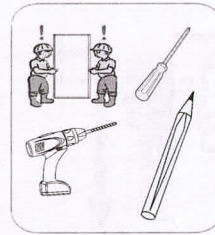

DT X1
*
* ST4X10

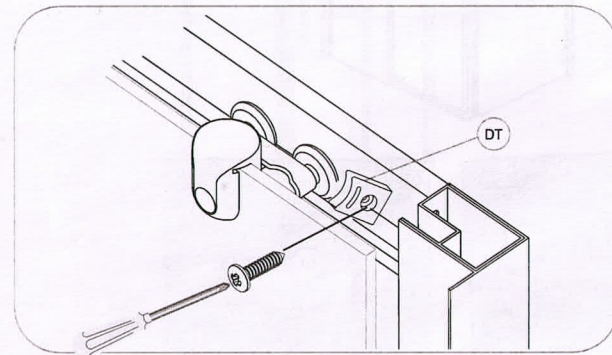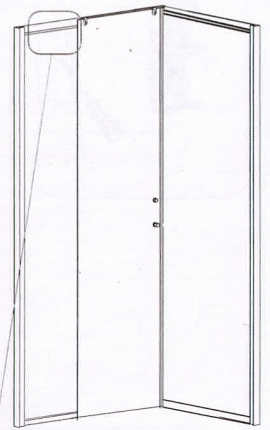

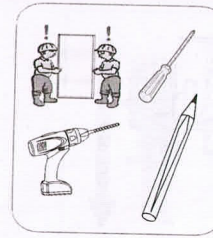

DT X1
*
* ST4X10

